


Manages color

and black/white

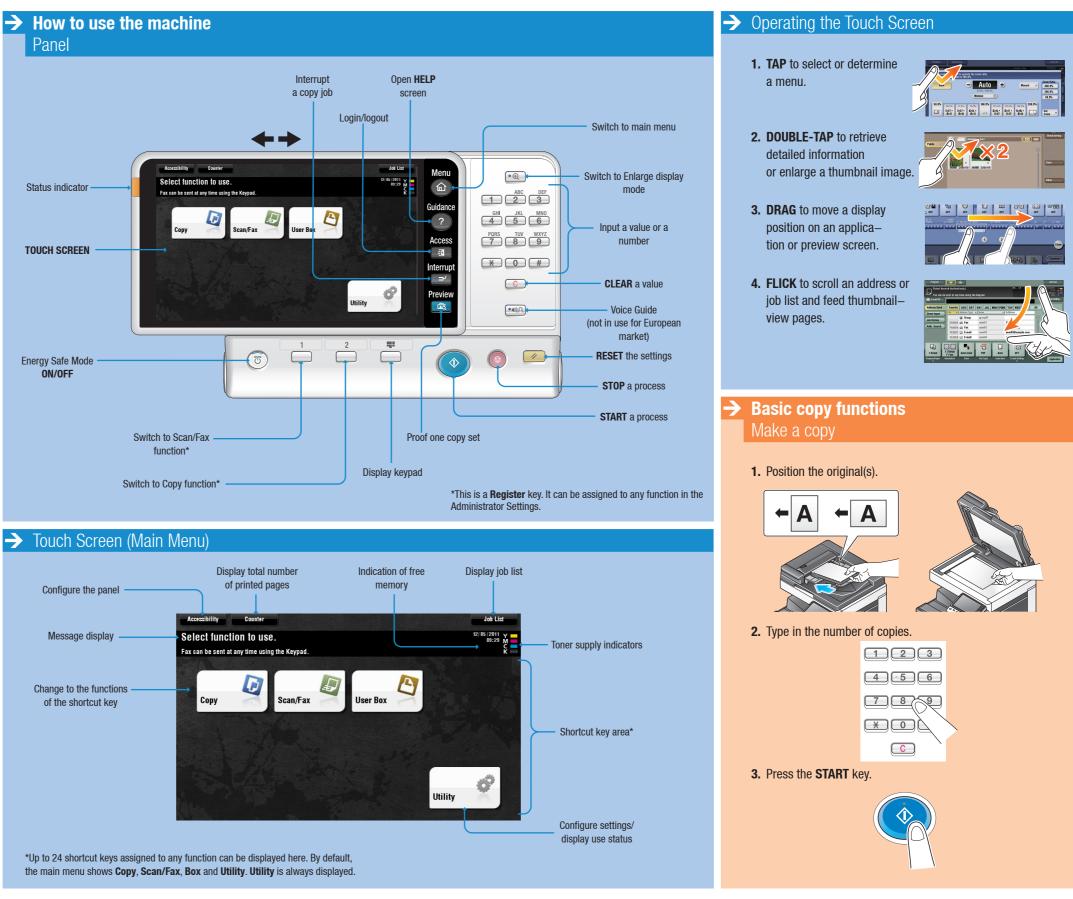




bizhub c554/c454/c364/c284/c224


Quick Reference 1/4




Manages color


and black/white

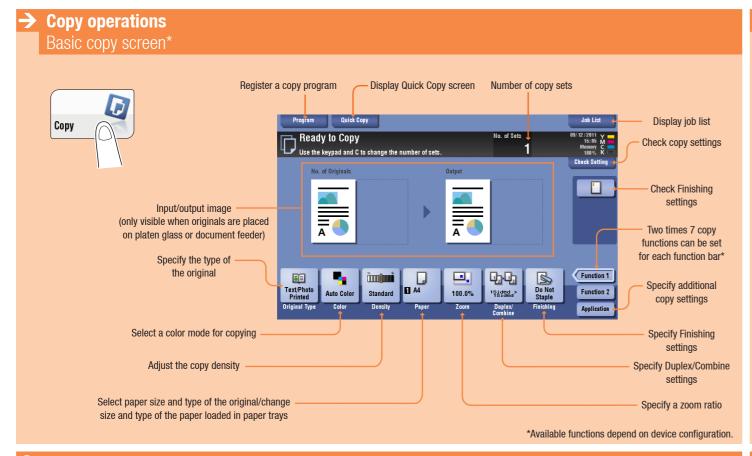

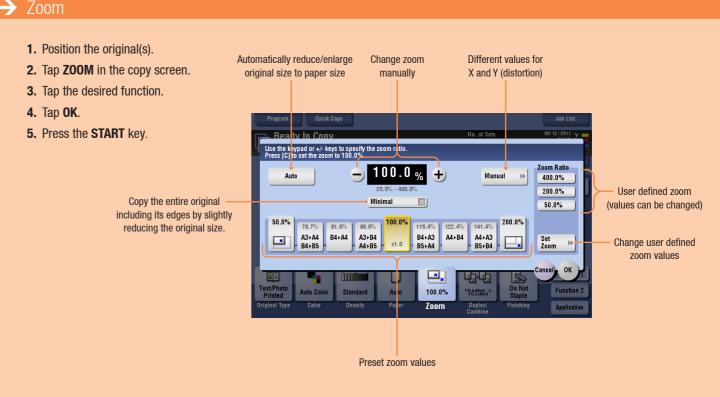

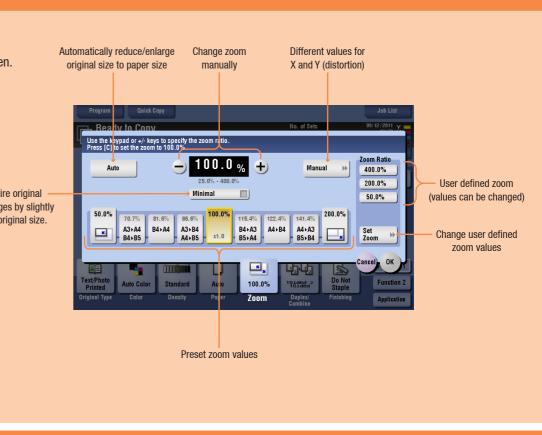


Duplex/Combine

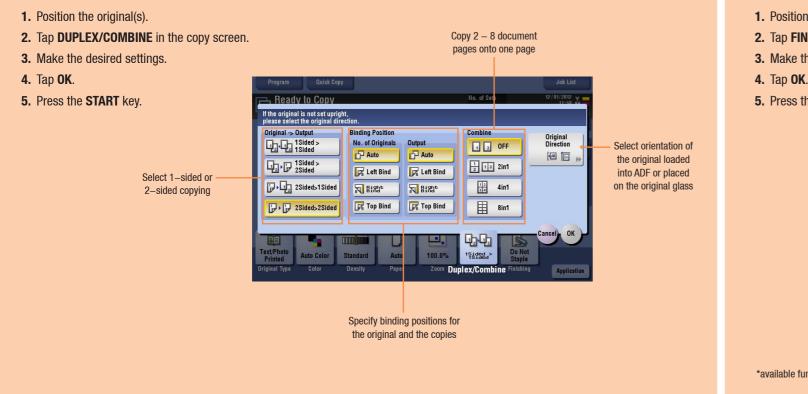

→ Finishing

- 1. Position the original(s).
- 2. Tap FINISHING in the copy screen.
- 3. Make the desired setting(s).*
- 5. Press the START key.

settings

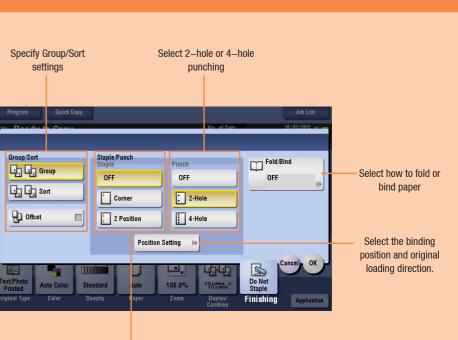

Select corner or two point stapling

*available functions depend on machine/finisher.

bizhub c554/c454/c364/c284/c224

Quick Reference 2/4



-> Scan operations

Scan/Fax

Scan/Fax screen

4

Manages color

Display job list

Check scan

settings

View destinations as

keys or sortable list

Select type of destination

Specify additional

scan/fax settings

Change the file name of the scanned original/ email subject and sender

Select the size of the original

and black/white

Address registration (public address book)

- 1. Tap UTILITY in the main menu.
- 2. Tap ONE-TOUCH/ USER BOX REGISTRATION.
- 3. Tap CREATE ONE-TOUCH DESTINATION
- 4. Tap ADDRESS BOOK (PUBLIC).
- 5. Select the type of destination you want to register.
- 6. Tap NEW.
- 7. Enter the destination information and tap OK.

ip-fax1 i-fax1 EPWebDAV webdav1 ELF fto1 Addr. Search Display job history -Search for a destination 9 • Specify simplex or duplex · 1-Sided S 200dpi F Fine PDF Auto ON Auto Colo Specify the scan resolution Select a color mode for scanning Specify the file type used to save the scanned data \rightarrow Search for a destination 1. Tap SCAN/FAX in the main menu. The destinations categorized into FAVORITE are displayed. 2. Tap ADDR. SEARCH > SEARCH. 1 2 3 4 5 6 7 8 9 0 - ^ qwertyuiop@[3. Tap NAME SEARCH or ADDRESS SEARCH. asdfghjkl;:] 4. Enter the search text and tap SEARCH zxcvbnm, 5. Select the destination from the search result.

Register a scan/fax program

📈 E-mail RX

Address Book

Direct Input

Job History

Fax can be sent at any time using the Keypad

e-mail1

Group1

Select a destination

from the address book

Enter a destination manually

6. Press the START key.

\rightarrow Sending data to multiple destinations

- **1.** Position the original(s).
- 2. Tap SCAN/FAX in the main menu. The destinations categorized into **FAVORITE** are displayed.
- 3. Tap ADD. TYPE.
- 4. Select the desired type of destination.
- 5. Specify two or more destinations.
- 6. Press the START key.



Number of sets

Ω


smb1

Add. Type

Favorite ABC DEF GHI JKL MNO PQRS TUV WXYZ etc All

fax1

box1

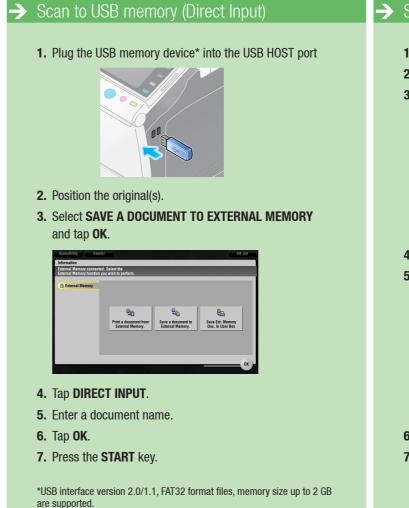

bizhub c554/c454/c364/c284/c224

Utility > Create One-Touch Destination > Address Book (Public)
Utility > Create One-Touch Destination > Address Book (Public)
Boolwark Utility > Create One-Touch Destination > Address Book (Public) Isplay Keypad Utility > Create One-Touch Destination > Address Book (Public)
spidy keypad
Utility 1 E-Hail 6 WebOW
2 User Box
e-Touch/ er Box Reg.
3 Fax sate One-Touch
stination 4 PC (SHB)
4 ddress Book 5 FTP
Public) 5
10/20/2011 18:26 Close
Registered number is automatically applied by touching [OK]. To specify a registered number, touch the No. button.
Boolmark Utility > Fax > New
isplay Keypad
No
Nane Nane
eate One-Touch
Sort Character
ddress Book
Index etc
Fax
↑ 1/2
↑ 1 / 2 New 10/20/2011 18/20 Cancel 0K

\rightarrow Scan to e-mail (Direct input)

- **1.** Position the original(s).
- 2. Tap SCAN/FAX in the main menu.
- 3. Tap DIRECT INPUT.



- 4. Tap E-MAIL.
- 5. Enter the destination address.




- 6. Tap OK.
- 7. Press the START key.

Quick Reference 3/4



Manages color


and black/white

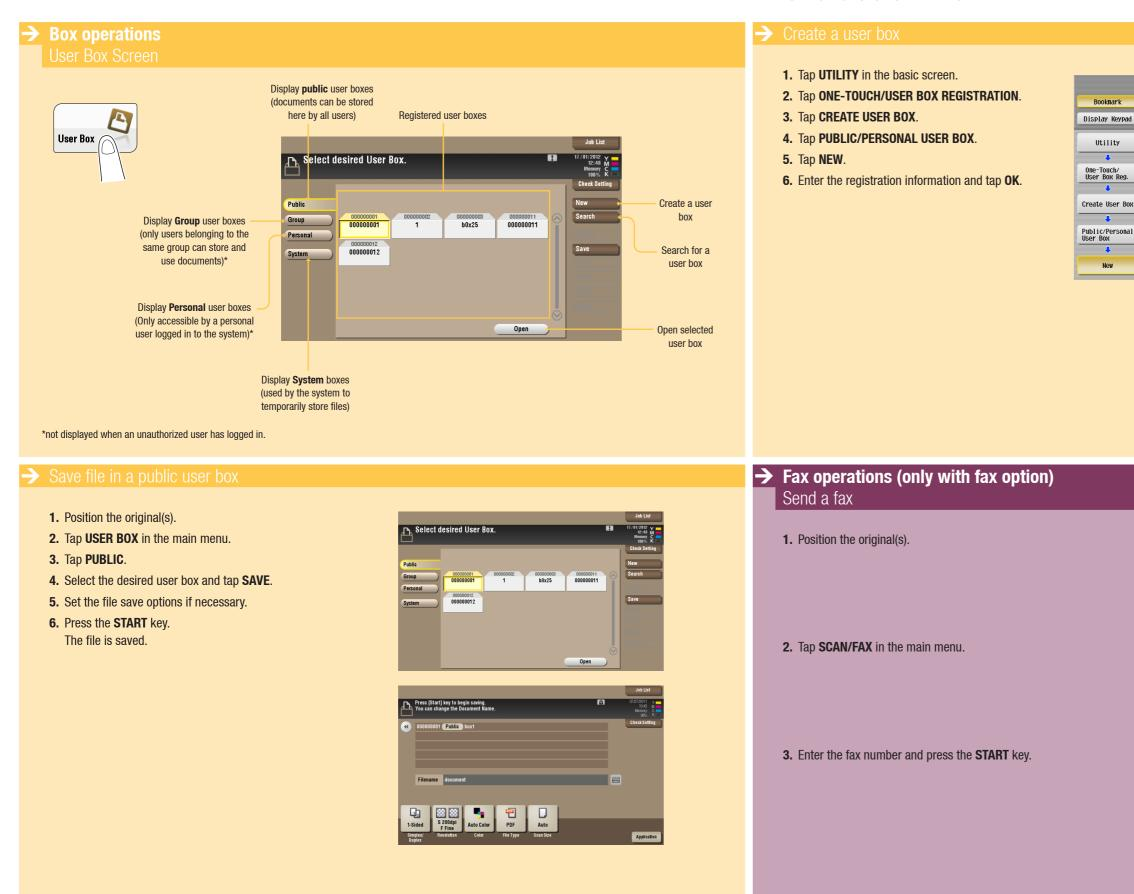

bizhub c554/C454/C364/C284/C224

Giving Shape to Ideas

ecify the settings. ter User Box number us	ing the keypad.				
tility > Public/Person	al User Box > New	1/2	≪Back	For- >>	
User Box No.	6	1 - 9	7999999999		
User Box Name					
Password					
Index	etc				
Туре	Public P	ersonal	Group		
Time Stored	07/27/2011 09:15				
/27/2011 09:15		Ca	nce1)	ОК	

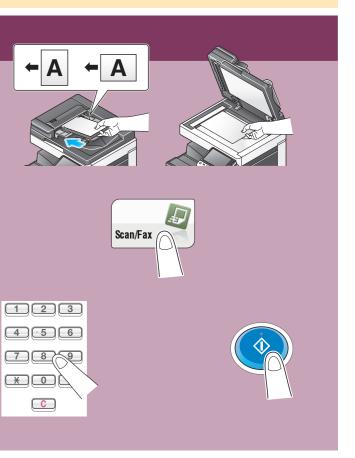

Quick Reference 4/4